

INCLUDES: Wireless Speaker and Underwater Light Show and AC adapter

WARNING

SEIZURES - People with photosensitive epilepsy can have seizures triggered by flickering or flashing lights such as strobe or disco lights. Do not operate the product in water while the unit is plugged in. Serious and/or fatal injury may result.

KEEP OUT OF REACH OF CHILDREN. THIS IS NOT INTENDED AS A TOY.

NOTE

- The product projects light show approximately 10-15 feet in diameter.
- Light show intensity will vary according to color, size and depth of your pool.

GETTING STARTED

IMPORTANT: Before first use, fully charge battery (6 hours). When fully charged, the red indicator light on top of the speaker will turn blue.

1. Plug the USB adapter into your computer's USB port or any standard 5V USB wall adapter.

WARNING: Use the supplied battery charge adapter; DO NOT substitute with any other charger. Never turn on the product while is charging.

- 2. Remove the charging port plug located on top of the speaker and plug the AC adapter connector into charging port.
- 3. After indicator light turns blue, unplug the charger from the charging port.
- 4. Replace the charging port plug, pressing it firmly into place so water doesn't seep into the port.

NOTE: Speaker indicator light will flash repeatedly and beep twice when the battery is low.

PAIRING YOUR DEVICE

- 1. Press the ON/OFF button. A "beep" tone sounds and light show turns on.
- 2. LED indicators flash blue while looking for Bluetooth® devices.
- 3. Select the searching mode on your device (refer to your device's owner's manual for details).
- 4. Pair your Bluetooth device (mobile phone or music player). When your device finds "GAMEBT," select it and connect.
- 5. The top flashing LEDs turn solid blue when Bluetooth device is connected.

POWERING OFF

Press the ON/OFF button. A tone will sound, and light show and speaker will turn off.

Speaker Hanger Light Show On/Off Volume Down Power On/Off Charging Port

IMPORTANT:

- Remove from pool when not in use or while cleaning so unit is not damaged by skimmers or other devices.
- Do not submerse unit in water as this could damage the electronic components.

CLEANING & MAINTENANCE

STORAGE

Wipe dry with a soft cloth after use.

When the product is out of water, it should be stored in a cool, dry place.

Do not leave the product in direct sunlight as this could damage the batteries.

IMPORTANT: The batteries are permanently sealed in the product and cannot be removed or replaced. Attempting to remove and/or replace the batteries will void the warranty. The battery in the remote control is replaceable.

NOTE

- Do not mix old and new batteries.
- · Do not dispose batteries into fire. Batteries may explode or leak.
- Do not mix alkaline standard (carbon-zinc), or rechargeable (nickel-cadium) batteries.
- Replace batteries ensuring the correct battery type, and as a simultaneous act.
- · Remove batteries if product is to be left unused for a long time.
- Clean the battery contacts and also those of the devices prior to battery installation.
- The supply terminal is not to be short circuited (+) (-).
- Non-rechargeable batteries are not to be recharged.
- · Batteries are to be inserted with the correct polarity.
- · Remove exhausted batteries promptly and dispose of properly.

Check your local regulations for proper disposal instructions of batteries.

TROUBLESHOOTING

| Problem | Possibilities/Solutions |
|--|--|
| Unit doesn't respond (no power) | Make sure unit is completely charged |
| | Make sure your device is properly paired with the GAME BT |
| Interference or static during playback | Avoid using the device between concrete or other building structures that may interfere with the signal. |
| | Please check if the battery level of the unit and the Bluetooth device and charge if necessary |
| Unable to connect your speaker and your Smartphone | Ensure the speaker is paired with your Smartphone. |
| | Ensure your Smartphone's Bluetooth feature is activated. Please refer to your Smartphone user guide for specific instruction. |
| | Ensure the speaker is within a maximum of 30 feet of your mobile headset(s) and there are no obstructions, such as thick solid wall or other electronic devices in between as it may cause shorter or interference transmission. |
| | If all the above steps do not resolve your problem, please turn off and restart the speaker |
| The light show isn't bright on my pool floor | Check to see if the product is fully charged |
| | If your pool floor is colored vinyl, "pebble tech", or other dark or colored material, some colors may not show up as well |
| No light show | Check to see if the product is fully charged |
| | Press the light button on the speaker |
| No sound/sound is low | Make sure both your audio devise and GAME Bluetooth speaker are charged |
| | Make sure to turn up the volume on your audio devise and GAME Bluetooth speaker |

CAUTION: Changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- · Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT.

This Class B digital apparatus complies with Canadian ICES-003.

LIMITED WARRANTY STATEMENT

General Terms

This Limited Warranty applies to the product enclosed ("the Product") distributed by Great American Duck Races, Inc., an Arizona corporation, doing business as Great American Marketing and Events ("GAME"), sold with this Limited Warranty Statement. This Limited Warranty is applicable in all countries. • GAME warrants that the Product you have purchased from GAME is free from defects in materials or workmanship under normal use during the warranty period. The warranty period starts on the date of purchase and continues for ninety (90) days. Your dated sales or delivery receipt, showing the date of purchase of the Product, is your proof of the purchase date. • During the warranty period, GAME will repair or replace any defective parts with new parts, or, at GAME's discretion, used parts that meet or exceed performance specifications for new parts. All parts removed under this warranty become the property of GAME. The replacement part takes on the warranty status of the removed part or product. • This Limited Warranty does not extend to any product from which the serial number has been removed or that has been damaged or rendered defective (a) as a result of accident, misuse, abuse or other external causes; (b) by operation outside the usage parameters stated in the Instruction Sheet that shipped with the Product; (c) by the use of parts not manufactured or sold by GAME; or (d) by modification or service by anyone other than GAME.

Limitation of Liability

GAME is not liable for any damages caused by the Product or the failure of the Product to perform, including any direct or indirect damages for personal injury, lost profits, lost savings, incidental damages, consequential damages, or any other pecuniary loss arising out of the use or inability to use the Product. GAME is not liable for any claim made by a third party or made by you for a third party. • This limitation applies whether damages are sought, or a claim made, under this Limited Warranty or as a tort claim (including negligence and strict product liability), a contract claim, or any other claim. This limitation cannot be waived or amended by any person. This limitation of liability will be effective even if you have advised GAME or an authorized representative of GAME of the possibility of any such damages.

EXCEPT AS EXPRESSLY SET FORTH IN THIS LIMITED WARRANTY, GAME MAKES NO OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. GAME EXPRESSLY DISCLAIMS ALL WARRANTIES NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW ARE LIMITED TO THE TERMS OF THIS WORLDWIDE LIMITED WARRANTY STATEMENT.

To obtain warranty service, please call, write, or email us directly at the address shown below.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

WARNING: GAME[™] has in the past, and will in the future, take any and all legal steps necessary in order to protect our proprietary trademarks, patents, trade dress, and copyrights. This applies to, but is not limited to, products, product design, graphics, packaging and literature. We will prosecute to the fullest extent of the law any persons or entities who infringe upon these rights.



Bluetooth is a register trademark. GAME is not affiliated with, sponsored by, or associated with Bluetooth.









